

TH1900 / TH1901 INSTRUCTION MANUAL

Correct relative humidity (RH) levels are vital to the longevity of all the natural wood products in your home. Most manufacturers recommend that levels be kept between 35% and 55% to keep the wood from splitting or swelling. Window condensation is a concern and occurs naturally when RH percentage levels rise above a given temperature. This meter will help you to monitor RH levels and avoid potential costly issues.

SET UP PROCEDURE

1. Insert battery flat side up.
2. Hold the **SET** button for 3 seconds.
3. Press **SET** for 12 hour format or **ADJUST – SET** for 24 hour format.
(Note AM or PM in 12 hour format.) Hour will flash.
4. Press **ADJUST** to desired hour and press **SET**. Minute will flash.
5. Press **ADJUST** to desired minute and press **SET – MODE**.
6. Press **MODE** twice and hold **SET** for three seconds. Year will flash.
7. Press **ADJUST** to desired year and press **SET**. Month will flash.
8. Press **ADJUST** to desired month and press **SET**. Date will flash.
9. Press **ADJUST** to desired day and press **SET – MODE – MODE**.

CONGRATULATIONS, your hygrometer is now set up and in CLOCK MODE. While in CLOCK MODE, follow these steps for additional functions:

1. Press **SET** to choose Fahrenheit or Celsius.
2. Press **MIN/MAX** to view maximum RH reading since last reset.
3. Press **MIN/MAX** again to view minimum RH reading since last reset.
4. Press and hold **MIN/MAX** to reset RH memory.

Product Specification Ranges:
Temperature: 32° - 122° F
0° - 50° C
Relative Humidity: 20% - 95%

WWW.EDTM.COM



EDTM
Glass, Window & Film Test Equipment